 


Hinge systems 門鉸

 
110°- CLIP top BLUMOTION hinge 內置緩衝







Overlay application
直臂門鉸 71B3550
(門蓋3-5分用)



Dual application
小彎門鉸 71B3650
(門蓋1-2分用)



Inset application
大彎門鉸 71B3750
(內掩門用)

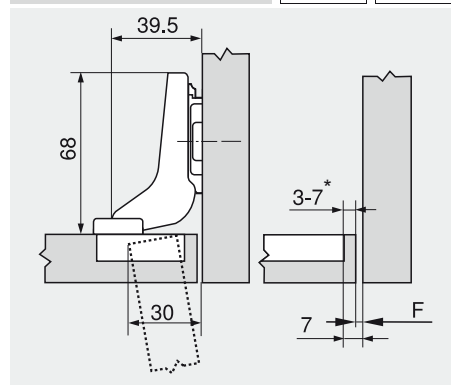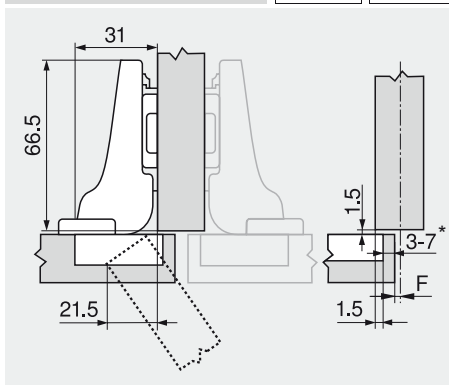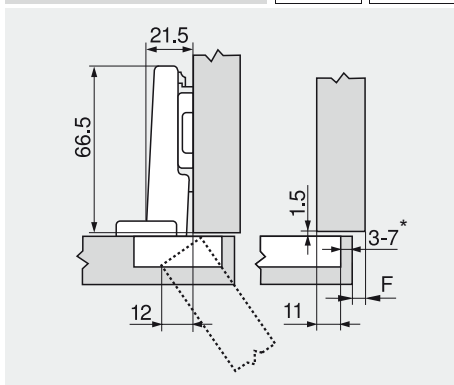 

F Gap 間隙

*3-7 mm Drilling distance 鉸杯鑽孔距離

Set mounting plate back by door thickness +1.5 mm
底座向後固定位置以門厚 +1.5 mm

Drilling distance 鉸杯鑽孔距離

Front overlay 門板重疊 (mm)																	
	-	5	6	7	8	9	10	11	12	13	14	15	16	17	18		
0												3	4	5	6	7	
3									3	4	5	6	7				

Mounting plate 底座墊高0或3 mm


Front overlay 門板重疊 (mm)																	
	-	-4.5	-3.5	-2.5	-1.5	-0.5	0.5	1.5	2.5	3.5	4.5	5.5	6.5	7.5	8.5		
0												3	4	5	6	7	
3									3	4	5	6	7				

Mounting plate 底座墊高0或3 mm


Front overlay 門板重疊 (mm)										-4	-3	-2	-1	0
0										3	4	5	6	7
3														

Mounting plate 底座墊高0或3 mm

 
Minimum gap (F) for fronts 門板最少間隙

		Front thickness FS 門板厚度 (mm)										
		16	18	19	20	21	22	23	24	25	26	
 Drilling distance 鉸杯鑽孔距離(mm)	Drilling distance TB	3	0.5	0.8	1.0	1.2	1.5	1.8	2.2	2.7	3.5	4.3
		4	0.5	0.8	1.0	1.2	1.4	1.7	2.0	2.5	3.1	3.8
		5	0.5	0.8	0.9	1.2	1.4	1.7	2.0	2.4	2.9	3.4
		6	0.5	0.8	0.9	1.2	1.3	1.6	1.9	2.3	2.7	3.2
		7	0.5	0.8	0.9	1.1	1.3	1.6	1.9	2.2	2.6	3.0
		Additional for + 2 mm side adjustment + 2 mm 左右調節外加										
		+0.2	+0.4	+0.4	+0.5	+0.5	+0.5	+0.5	+0.5	+0.5	+0.5	

Adjustment 調節

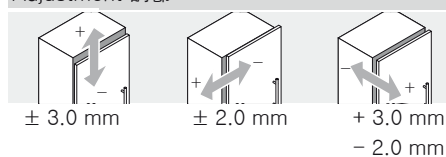

Hinge boss assembly dimension 鉸杯安裝尺寸

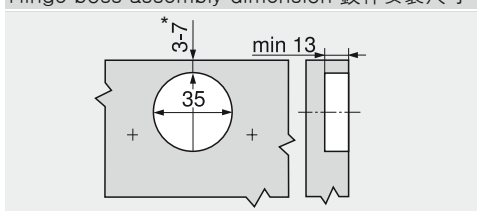

Cruciform mounting plate 十字底座



37/32



-Fixing with chipboard screws
使用木工螺絲

Ø 3.5 and Ø 4 mm

-With height adjustment
高度調節 ± 3 mm

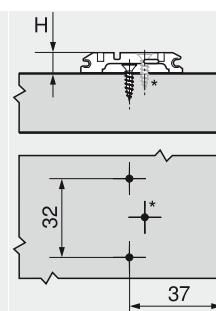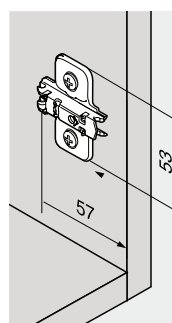


H Height 高度

*Additional screw
附加螺絲



Spacing 墊高	Height 高度	Part no. 編號
0 mm	8.5 mm	173L6100
3 mm	11.5 mm	173L6130

110°- CLIP top BLUMOTION hinge 內置緩衝


Hinge 門鉸

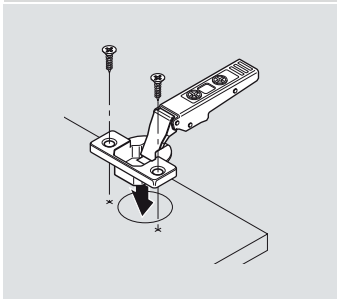


Hinge boss is fixed with 2 chipboard screws
鉸杯以兩口木工螺絲固定

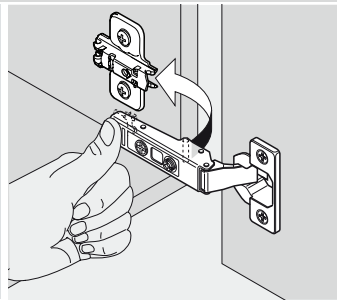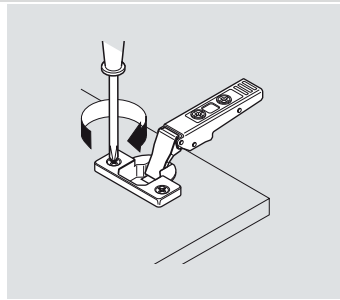


Assembly 安裝

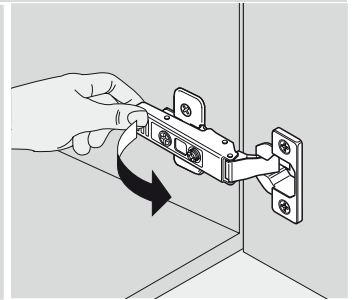


Removal 拆卸

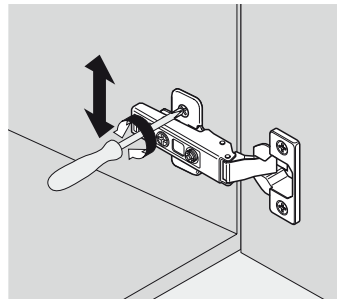

Height adjustment 高度調節

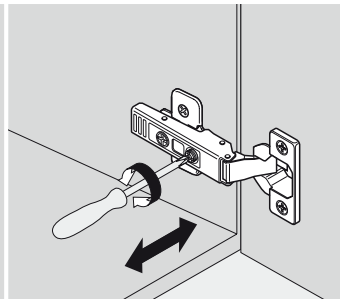


Side adjustment 左右調節

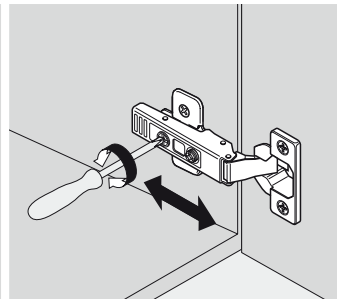


Depth adjustment 深度調節

Boss cover cap 鉸杯標誌蓋 (70T3504)

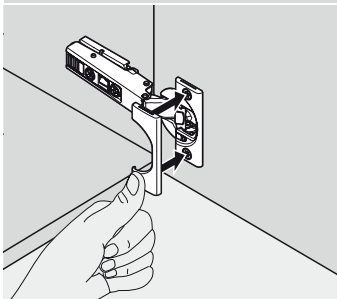


Assembly 安裝

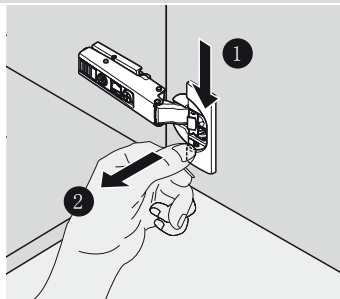


Removal 拆卸


Opening angle stop 86° 角度限制器 – 70T3553 (Optional 可額外配置)

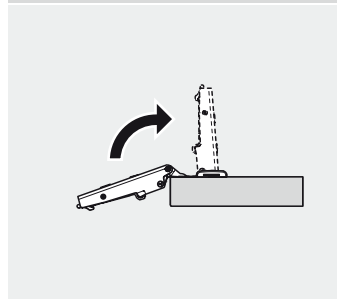



Assembly 安裝

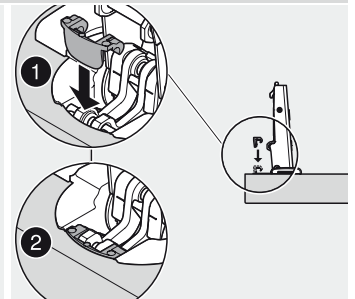

CLIP top BLUMOTION 緩衝裝置

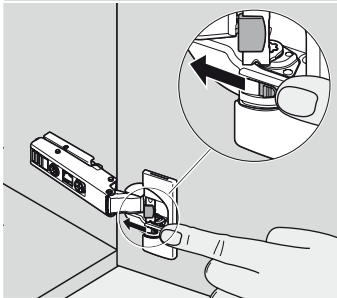


Deactivation 關閉

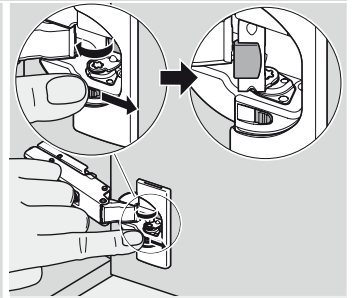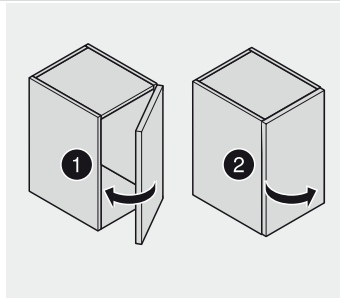

Activation 開啓

Number of Hinges 門鉸數量

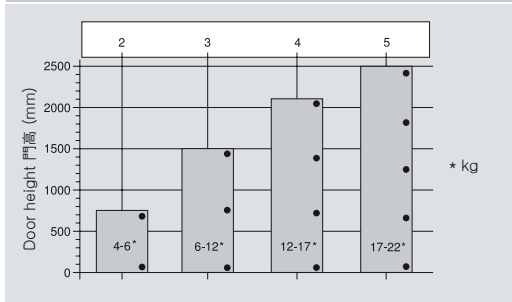

The number of hinges depends on the door weight and front height
門鉸數量取決於門的重量和高度

To achieve good stability, distances between hinges should be as large as possible
請盡量拉大門鉸之間的距離以保持良好的穩定性

Information on weight and height apply to a standard door width of 600 mm
負載數據和高度應用於門闊 600 mm

Blum Furniture Hardware
Hongkong Limited

Tel.: 852-2572 2816

Fax: 852-2572 2817

E-Mail: info.hk@blum.com

www.blum.com.hk



Cleaning Instructions 清潔指引

- Wipe using lightly damp soft cloth 用微濕的軟布抹擦
- Only use clean water, do not use chemical cleaners 使用清水便可, 請勿使用化學清潔劑