


TANDEMBOX antaro

S7

INSTALLATION
SHEET



豪华金属抽百变星系列

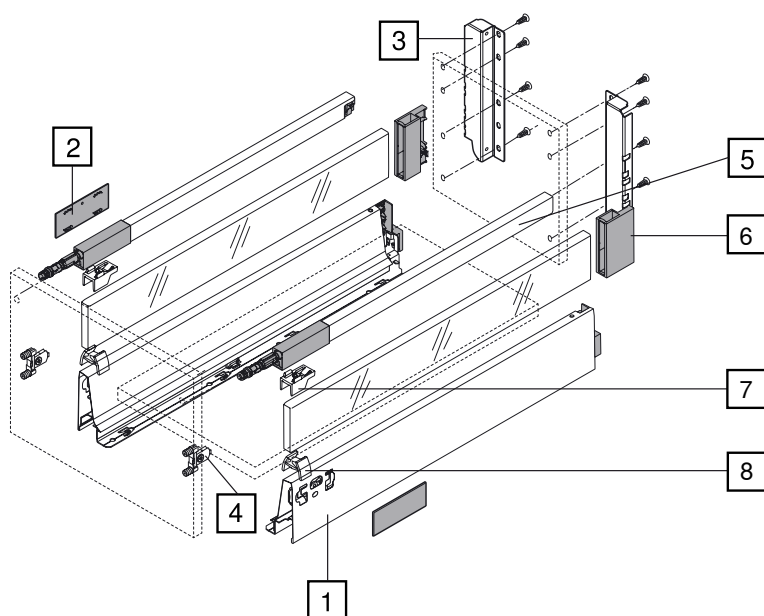


Item	Qty	Unit	Description
1	1	pair	Drawer sides left/right 抽帮左/右
2	2	pcs	Cover caps with Blum logo / 装饰盖 左/右
3	1	pair	Back fixing left/right 背板固定件 左/右
4	2	pcs	Front fixings, screw-on / 前接码
5	2	pcs	Adj. longside galleries 扶杆
6	1	pair	Locking piece (L/R) 锁片(左/右)
7	2	pcs	Locking piece (front upper) 前上锁片
8	2	pcs	Locking piece (front lower) 前下锁片




Planning / 设计




Cutting dimensions/ 切板的尺寸

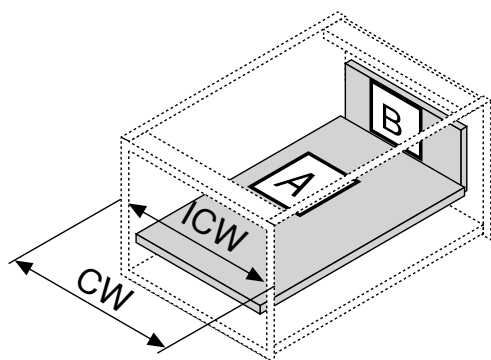

Back/ 后背板

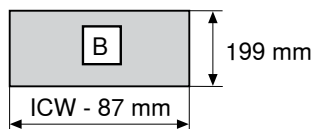


Base/ 底板

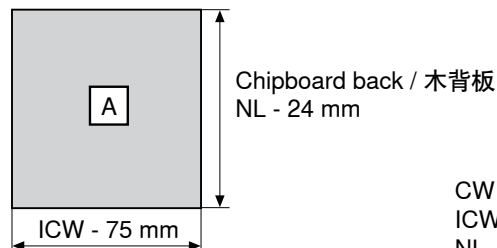


CW - Cabinet width/ 箱体宽度
ICW - Inner cabinet width/ 箱体内宽
NL - Nominal length/ 标称长度

Space requirements in carcase/ 箱体内的空间需求

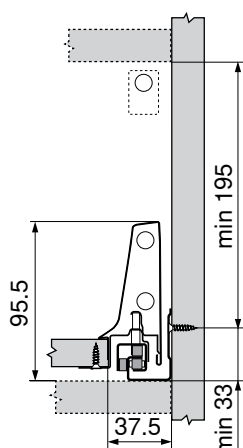


Drilling Dimensions / 面板钻孔尺寸

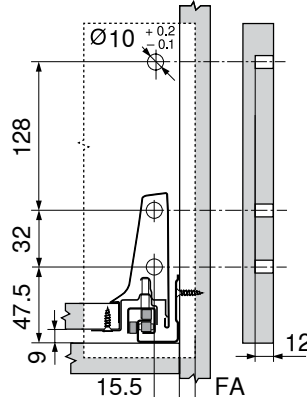


FA = 面板重叠部分
Front overlay



Back installation dimensions/ 背板安装尺寸

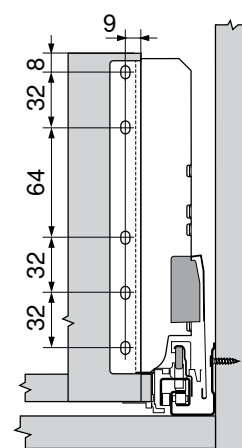

Design element cutting dimensions/ 插板的尺寸

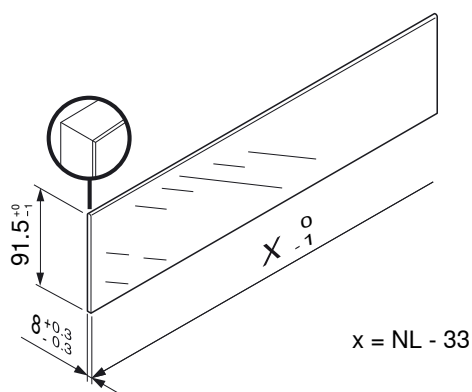


According to standard
(DIN EN 14749 Edition Nov. 2005)
no safety glass is stipulated in combina-
tion with TANDEMBOX intivo.

The edge is a polished flat-ended edge
with a 1 mm +/- 0.5 mm bevel.



按规定 (DIN EN 14749 2005年11月版)应
用在TANDEMBOX antaro 中无需适用安
全玻璃。上边缘需抛光成平边, 倒角1 mm
+/- 0.5 mm。

Assembly / 安装指示


Assembly front / 安装面板

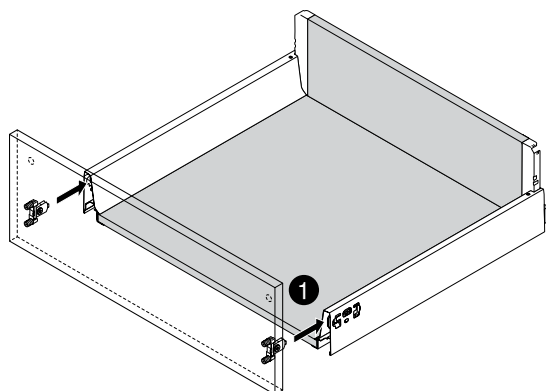

Assembly gallery / 安装扶杆

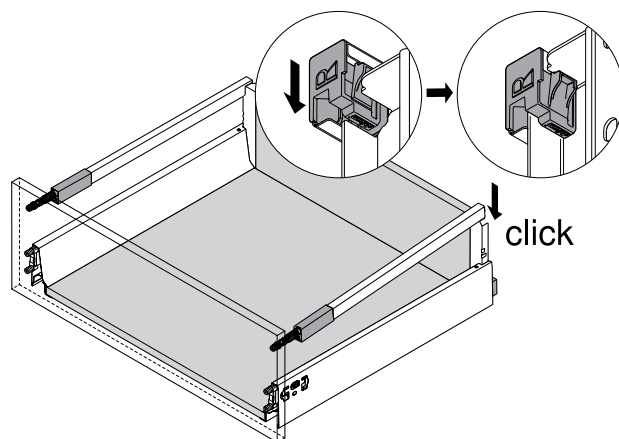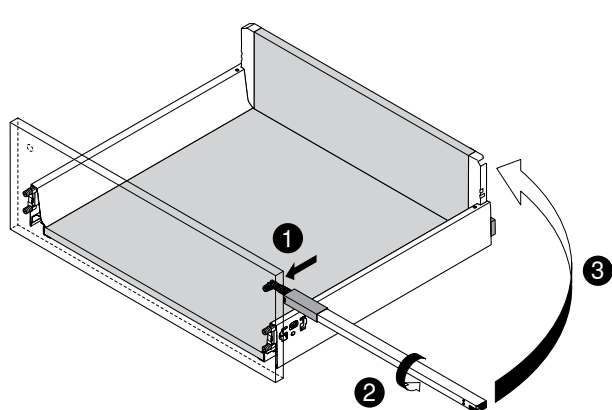


Tilt adjustment / 倾斜度调节

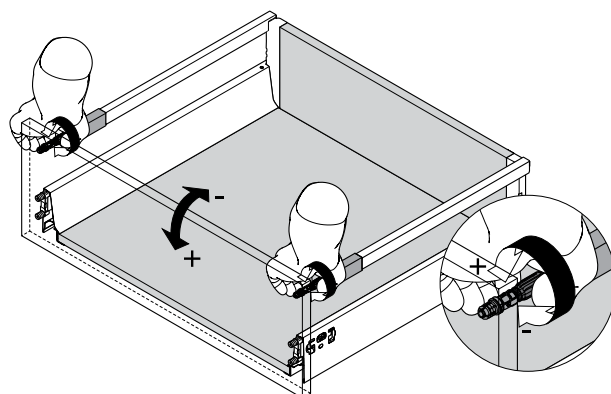


Assembly / 安装指示


Assembly cover cap / 安装装饰盖

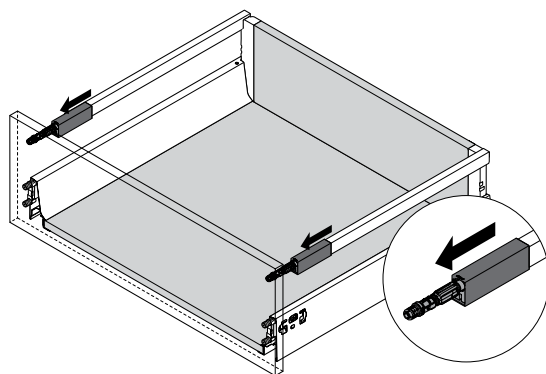


Height adjustment / 高度调节

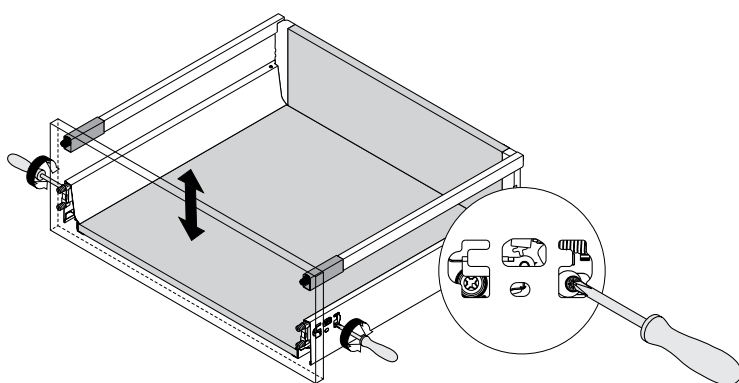

Side adjustment / 侧面调节

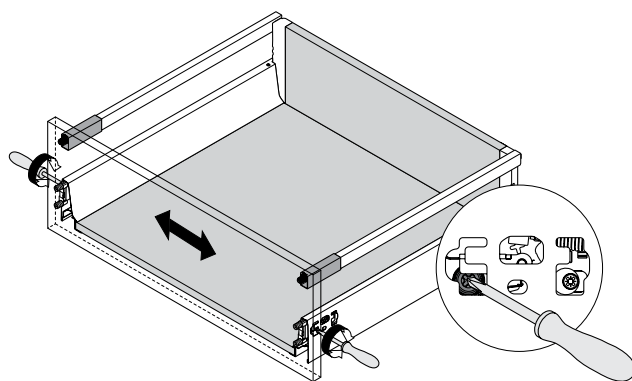


Assembly cover cap / 安装装饰盖

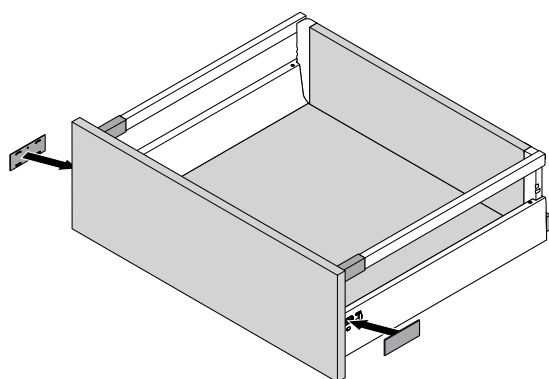


Design element / 插板


1

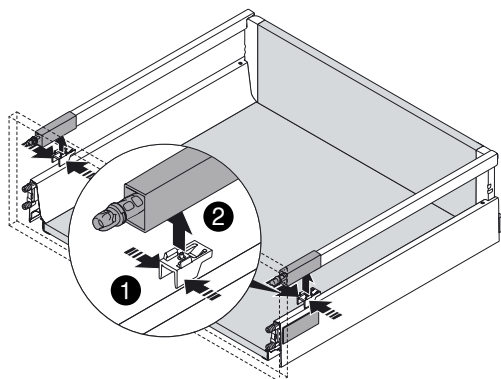


2

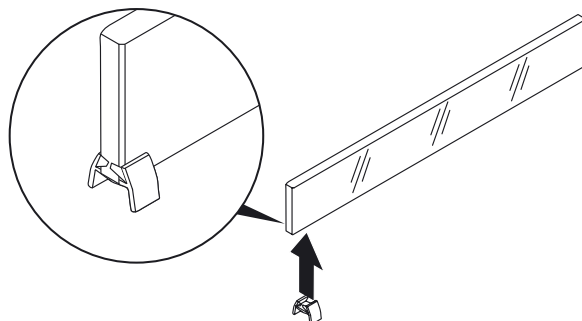

3

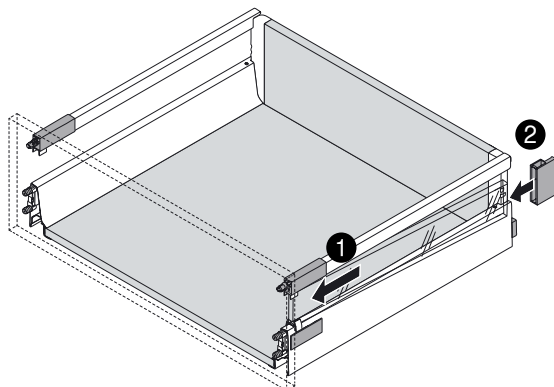


4

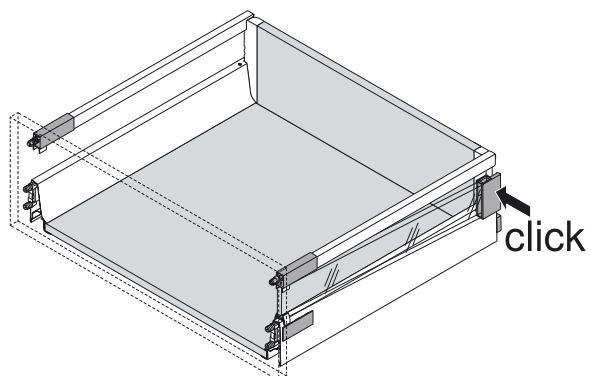


Removal / 拆卸

Design element removal / 插板拆卸



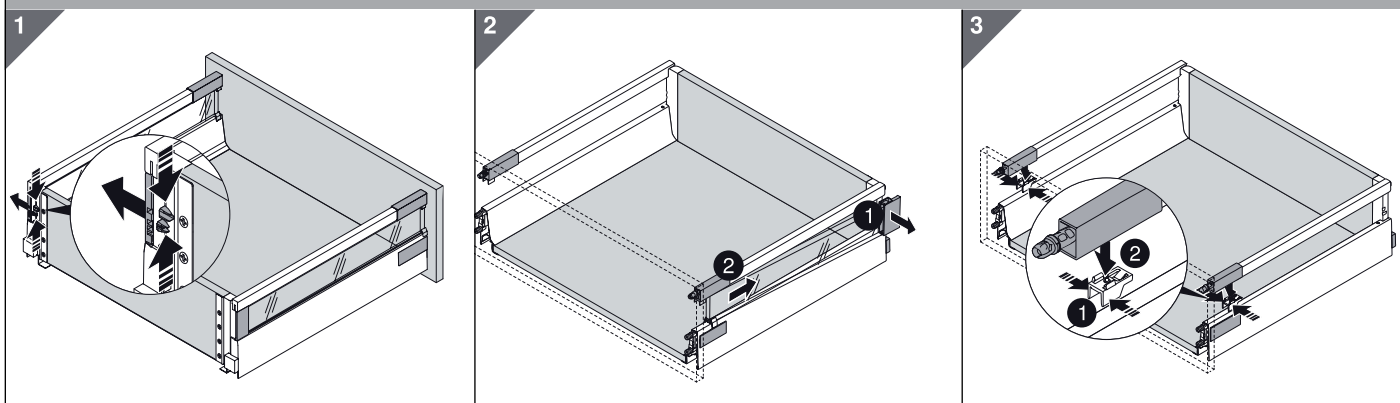


Removal gallery / 拆卸扶杆

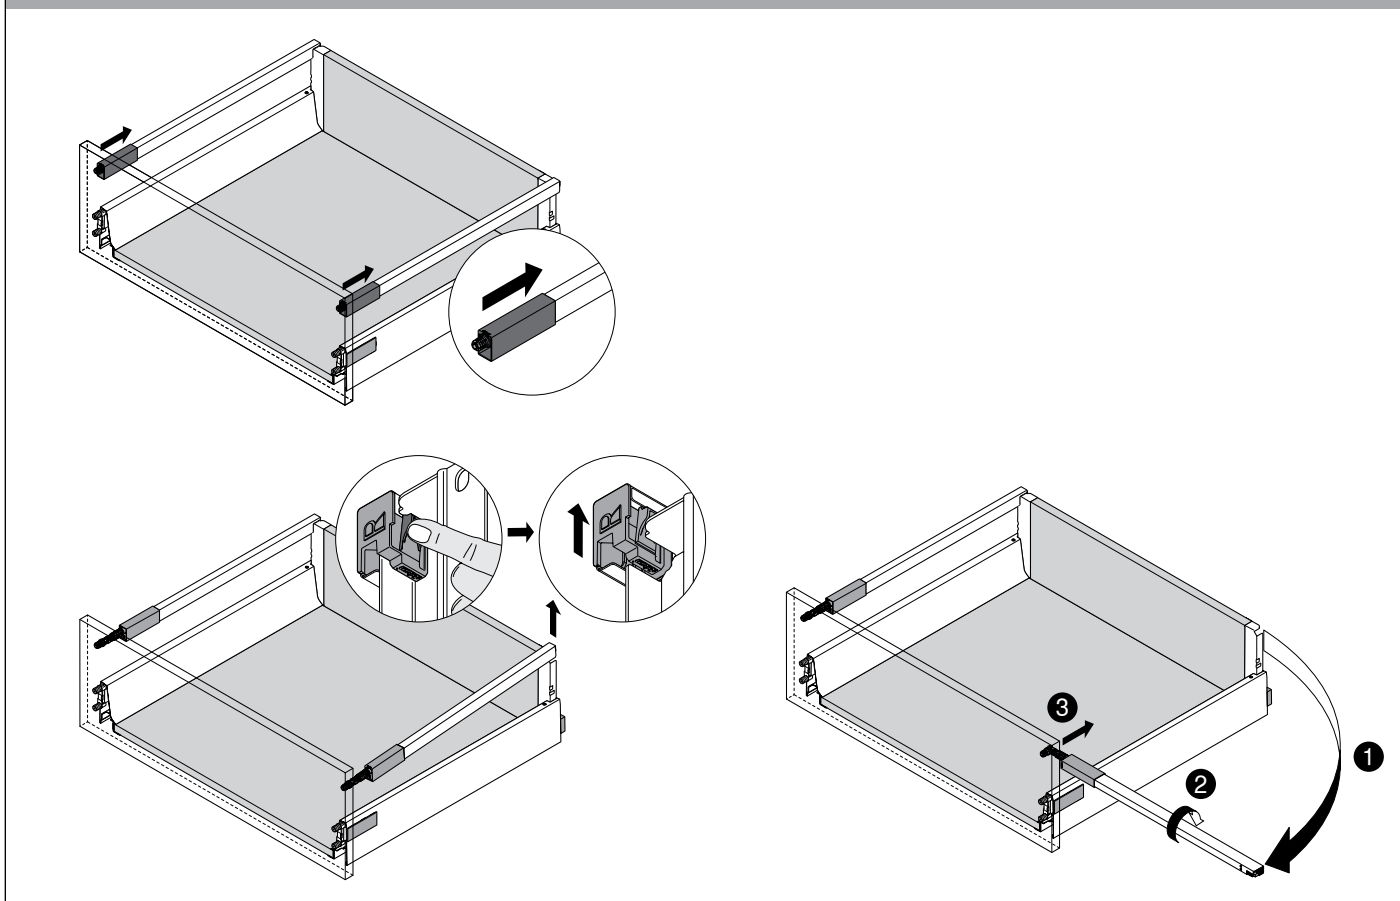

Removal / 拆卸

Removal of front / 拆卸面板

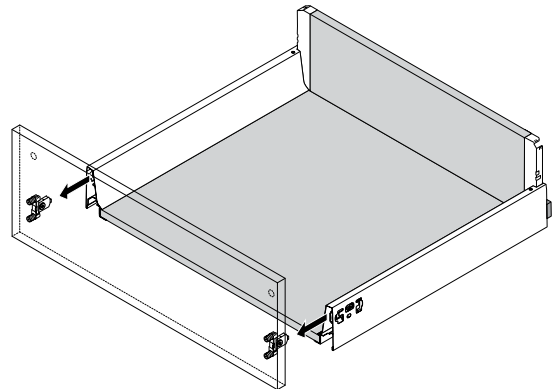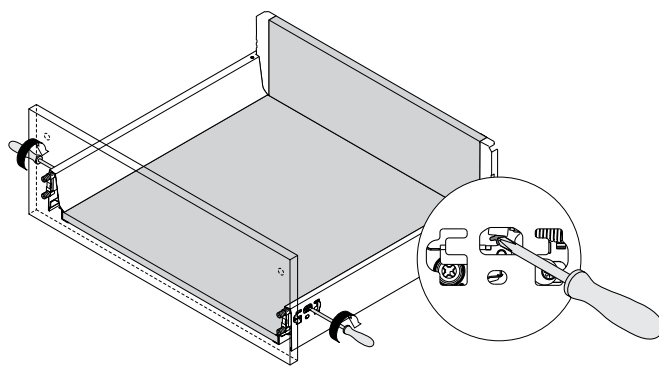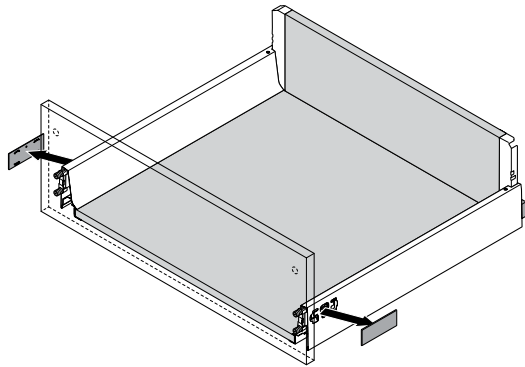

Julius Blum GmbH
Furniture Fittings Mfg.
6973 Hoechst, Austria
Tel.: +43 5578 705-0
Fax: +43 5578 705-44
E-Mail: info@blum.com
www.blum.com
connect.blum.com